

Work Order ID 75388

\*75388\*

Page 1

Item ID: D206-642-151

Accept

\*N900040100\*

Setup Start \*NS1\*

Revision ID:

Stop \*NS2\*

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

\*1\*

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

\*1\*

Customer:

Reference:

Approvals: Process Plan: M.L.J Date: 11/10/21 Tooling:

Run Start \*NR1\*

QC: Date: SPC (Y/N):

Date:

Stop \*NR2\*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

D3804

A

IIN-D206-642

O

100

\*100\*

DC

Document Control

DOCUMENT CONTROL

Memo

Photocopy bluefile & type labels per PPE D206-642-151 CHG001

SCRAP

Scrap

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

**Work Order ID 75388**

October-21-11 11:30:25 AM

**\*75388\***

Page 2

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
110	Skidtubes	0.00							
<b>*110*</b>									
Skidtubes	Memo	0.00							
Skidtubes	1-Debur Fwd edge of tube								
	2- Remove ridge on inside of Fwd edge of tube as per Dwg D3804								
	3-Weld Fwd Cap as per Dwg D3804. Use aluminum rod. Grind D2647 to fit as required.								
	Pick:								
	Qty Part Number Description Batch								
	A/R Aluminum Rod <u>M119735/M117889</u>								
	4-Grind weld flush to cap on top surface only.								
	5-Cut Aft end as per dwg D3804 from front of tube and Debur								
	6-Remove inner indexing ridge on Aft end of skidtube as per Dwg D3804								
	7-Open holes for Aft end cap as per Dwg D3804 with #30 Drill Bit using DT8025.								
	8-Drill pilot holes using Dt8166 & DT8169D & DT9771.								
	9-Locate DT8732 from inner Aft saddle hole & 3rd crossbolt hole. Insert D3286-1 doubler using DT8732 & D206-642-241-T1, then locating doubler off of 3/16" holes, cleco DT8732 & doubler leaving DT8732 for added support.								
	10- Drill D3286-1 doubler rivet holes in tube using # 30 drill, spot drilling doubler at the same time.								

2 SAD 11-11-21

7 BE 11-11-22

11/11/22

11/11/23

Pro 7

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

*Signature Aluminum*  
*See print 11-10-23*  
*NCR*

Part No: D206-642751 PAR #: \_\_\_\_\_ Fault Category: Supplier NCR: (Yes) No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
 Resolution: SCRAP Disposition: SCRAP QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			
11/14/25	#100	Found when Drilling pilots holes that tube has a Bend in it. The extrusion has Bend in it.	<i>S</i> 11/14/25 057042	SCRAP + Destroy	<i>B</i> 11/14/25	<i>S</i> 11/14/25	<i>S</i> 11/14/25	<i>S</i> 11/14/25
		R.L. material / supplier					057042	

*11/16/25*

NOTE: Date & initial all entries

**Work Order ID 75388****\*75388\***

Page 3

October-21-11 11:30:25 AM

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

11-Working from the center out, drill # 30 holes into D3286-1 doubler. Cleco each hole as it is being drilled. Verify angle of holes to accommodate rivet heads.

12-Remove 3/16" cleco's only and open GHW holes to Ø0.500" as per Dwg D3804

13-Remove D3286-1 doublers, identify orientation, deburr, then attach them to the workorder

14-Remove indexing edge using DT8741 as per Dwg D3804

15-C'sink GHW rivet holes as per Dwg D3804

16- Open Aft cap hole #6.  
\*\*\*\*no wearplate holes for this skidtube\*\*\*\*

17-Deburr tube and blow out chips from inside the tube

120

QC6- Inspect dimensions to drawing

0.00

**\*120\***

QC

Memo

0.00

Quality Control

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

# Work Order ID 75388

**\*75388\***

Page 4

October-21-11 11:30:25 AM

Item ID: D206-642-151 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Replacement Skidtube  
 Start Date: 21/10/2011 Start Qty: 1.00 **\*1\*** Cust Item ID:  
 Required Date: 02/11/2011 Req'd Qty: 1.00 **\*1\*** Customer:  
 Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
140	Chemical Conversion Coat per QSI005 4.1	0.00							
<b>*140*</b>									
HandFinish	Memo	0.00							
Hand Finishing									
150	QC3- Inspect Part Finish	0.00							
<b>*150*</b>									
QC	Memo	0.00							
Quality Control									
160		0.00							
<b>*160*</b>	Skidtubes								
Skidtubes	Memo	0.00							
Skidtubes	1-Open holes to finished size as per Dwg D3804, (without cutting fluid)								
	2-C'sink crossbolt spacer holes as per Dwg D3804(without cutting fluid)								
	3-Deburr and blow out all chips from inside the tube								

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries



October-21-11 11:30:25 AM

**Item ID:** D206-642-151

**Accept**

**\*N900040100\***

Setup Start \*NS1\*

Revision ID:

**Item Name:** Replacement Skidtube

Stop \*NS2\*

**Start Date:** 21/10/2011 **Start Qty:** 1.00

**\* 1 \***

**Cust Item ID:**

**Required Date:** 02/11/2011      **Req'd Qty:** 1.00

**\* 1 \***

**Customer:**

**Reference:**

**Approvals:**      **Process Plan:** \_\_\_\_\_ **Date:** \_\_\_\_\_ **Tooling:** \_\_\_\_\_ **Date:** \_\_\_\_\_

Run Start \*NR1\*

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop \*NR2\*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

170 QC6- Inspect dimensions to drawing

0.00

**\*170\***

QC

## Memo

0.00

## Quality Control

180

0.00

**\*180\***

## Skidtubes

## Skidtubes

## Memo

0.00

## Skidtubes

1-Locate, install and rivet doublers as per Dwg D3804. Micro-shave rivets as required

2-Bond D2654-1 web in place as per QSI 015. Ensure holes line up. Allow 12 Hrs. cure time before cutting

Start Date: \_\_\_\_\_ Time: \_\_\_\_\_

Finish Date: \_\_\_\_\_ Time: \_\_\_\_\_

Pick:

[illegible]

A/R Sikaflex-291

Sikaflex expire date: \_\_\_\_\_

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

**\*75388\***

October-21-11 11:30:25 AM

**\*N900040100\***

Setup Start \*NS1\*

Stop \*NS2\*

**Start Date:** 21/10/2011 **Start Qty:** 1.00

**\*1\***

**Customer:**

**Required Date:** 02/11/2011      **Req'd Qty:** 1.00

**\* 1 \***

**Reference:**

**Approvals:**      **Process Plan:** \_\_\_\_\_ **Date:** \_\_\_\_\_ **Tooling:** \_\_\_\_\_ **Date:** \_\_\_\_\_

Run Start \*NR1\*

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop \*NR2\*

### Operation Description

### Set Up/ Run Hours

**Tool ID**

**Tool #****Plan  
Code**

**Accept  
Qty**

Reject  
QtyReject  
Number

**Insp.  
Stamp**

190

QC5- Inspect part completeness to step on W/O

0.00

\*190\*

QC

## Memo

0.00

## Quality Control

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

**Work Order ID 75388**

October-21-11 11:30:25 AM

**\*75388\***

Page 7

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Item Name: Replacement Skidtube

Stop **\*NS2\***

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
200	Skidtubes	0.00							
<b>*200*</b>									
Skidtubes									
Skidtubes	<b>Memo</b>	0.00							
	1-remove alodine from around hole and prepare for welding								
	2-Prep per QSI 005 and Insert D2649 crossbolt spacers. Weld as per QSI 004 and Dwg D3804. Remember to back drill each hole to 0.25" before welding the other side. Use aluminum rod. Pick: QtyPart NumberDescriptionBatch A/RAluminum Rod_____								
	3-Grind welds flush as per Dwg D3804.								
	4-Using DT8733, insert (2) D3286-3 spacers as per QSI 004 and Dwg D3804. Remember to back drill each hole to Ø0.402" before welding other side. Use SS rod as required. A/RSS Rod_____								
	5-Counterbore 5/16" x 0.750" deep except 7th hole from Aft end as per Dwg D3804. Deburr								

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

H:\FORMS\Quality Assurance\approved QA\NCRWO RevE

**\*75388\***

October-21-11 11:30:25 AM

**Accept**

**\*N900040100\***

Setup Start \*NS1\*

Stop \*NS2\*

**Start Date:** 21/10/2011    **Start Qty:** 1.00    **\*1\***

**Cust Item ID:**

**Required Date:** 02/11/2011      **Req'd Qty:** 1.00      **\* 1 \***

**Customer:**

**Reference:**

**Approvals:**      **Process Plan:** \_\_\_\_\_ **Date:** \_\_\_\_\_ **Tooling:** \_\_\_\_\_ **Date:** \_\_\_\_\_

Run Start \*NR1\*

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop \*NR2\*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

210

0.00

**\*210\***

## HandFinishing

0.00

HandFinish

## Memo

## Hand Finishing

Install D2680-041 Nut Plate as per Dwg D3804

215

QC9- Inspect visual per QSI004- Fusion Welds

0.00

**\*215\***

## Memo

0.00

QC

## Quality Control

220

QC10- Inspect visual per QSI004- ground welds

0.00

**\*220\***

## Memo

0.00

QC

## Quality Control

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries



**Work Order ID 75388****\*75388\***

Page 9

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
230	QC5- Inspect part completeness to step on W/O	0.00							
<b>*230*</b>									
QC	Memo	0.00							
Quality Control									
240	Pressure Wash per QSI005 4.3	0.00							
<b>*240*</b>									
HandFinish	Memo	0.00							
Hand Finishing									
250	White Gloss(Ref:4.3.5.1) per QSI005 4.3-Alum	0.00							
<b>*250*</b>									
Powdercoat	Memo	0.00							
Powder Coating	START TIME: _____ OVEN TEMPERATURE: _____ FINISH TIME: _____								

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

**Work Order ID 75388****\*75388\***

Page 10

October-21-11 11:30:25 AM

Item ID: D206-642-151 Accept **\*N900040100\*** Setup Start **\*NS1\***  
Revision ID: Stop **\*NS2\***  
Item Name: Replacement Skidtube  
Start Date: 21/10/2011 Start Qty: 1.00 **\*1\*** Cust Item ID:  
Required Date: 02/11/2011 Req'd Qty: 1.00 **\*1\*** Customer:  
Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
260	QC3- Inspect Part Finish	0.00							
<b>*260*</b>									
QC	Memo	0.00							
Quality Control									
270	HandFinishing	0.00							
<b>*270*</b>									
HandFinish	Memo	0.00							
Hand Finishing	1-Install D2651-3 O-Rings on D2651-1 plugs with Petroleum Jelly and install plugs as per Dwg D3804. Clean excess adhesive.								

LH

**Dart Aerospace Ltd**

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

October-21-11 11:30:25 AM

Page 11

## Quality Control

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

**Work Order ID 75388**

October-21-11 11:30:25 AM

**\*75388\***

Page 12

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Item Name: Replacement Skidtube

Stop **\*NS2\***

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
300	QC5- Inspect part completeness to step on W/O	0.00							
<b>*300*</b>									
QC	Memo	0.00							
Quality Control									
310	Packaging	0.00							
<b>*310*</b>									
Packaging	Memo	0.00							
Packaging	Identify and pack for shipping as per PPP D206-642-151								
	Location: _____								
	PPP Rev: _____								
320	QC21- Final Inspection - Work Order Release	0.00							
<b>*320*</b>									
QC	Memo	0.00							
Quality Control									

21/11/25  
P

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries



# Picklist Print

Page 1

October-21-11 11:30:29 AM

Work Order ID: 75388

**\*75388\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV:A 10.12.08 PER IIN REV:N DD VERF:EC IPP  
REV:B 11.09.16 PER IIN REV:O DD VERF:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D2620		Manufactured	No			110	Each	13.0000	1	1			
										**	SAD 11-11-21		

**\*D2620\***  
Skidtube, 206 Skidtube

Location	Loc Qty	Loc Code
LG	13	
71616	3	
71617	6	
73783	1	
73785	1	
73786	2	

D2647		Manufactured	No			110	Each	199.0000	1	1			
										**	BE 11-11-22		

**\*D2647\***  
Cap

Location	Loc Qty	Loc Code
LG002	199	
55352	4	
71171	11	
73826	184	

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:30:29 AM

Page 2

Work Order ID: 75388

**\*75388\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

CR3212-4-04

Purchased

No

180

Each

18,966.00

52

52

**\*CR3212-4-04\***

Cherry Rivet

**\*\***

Location

Loc Qty

Loc Code

ST311

150

116471

78

117816

3

118686

1

118840

68

st510

10000

119075

10000

ST516

8816

119017

8816

D2654-1

Manufactured

No

180

Each

4.0000

1

1

**\*D2654-1\***

Web

**\*\***

Location

Loc Qty

Loc Code

LG

4

73794

4

D3286-1

Manufactured

No

180

Each

110.0000

2

2

**\*D3286-1\***

Doubler

**\*\***

Location

Loc Qty

Loc Code

LG002

110

74111

22

74441

88

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

# Picklist Print

October-21-11 11:30:29 AM

Page 3

Work Order ID: 75388

**\*75388\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

D2649                      Manufactured      No                      200              Each              1,184.000              19              19

**\*D2649\***

Cross Bolt Spacer

**\*\***

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
LG	617	
68224	2	
71355	2	
72704	2	
72841	11	
73855	600	
LG001	567	
65317	1	
68507	11	
73390	8	
73857	21	
73860	526	

D3286-3                      Manufactured      No                      200              Each              101.0000              2              2

**\*D3286-3\***

Spacer

**\*\***

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
LG001	101	
74117	21	
74439	80	

D2680-041                      Manufactured      No                      210              Each              99.0000              1              1

**\*D2680-041\***

Nut Plate

**\*\***

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
LG	4	
73334	4	
ST020	95	
73854	95	

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

# Picklist Print

October-21-11 11:30:29 AM

Work Order ID: 75388

**\*75388\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

CR3212-4-03

Purchased

No

210

Each

2,010.000

2

2

**\*CR3212-4-03\***

**\*\***

Cherry Rivet

Location

Loc Qty

Loc Code

FP-B

2

110139

2

ST311

1008

114859

1008

ST318

1000

119017

1000

AN960JD416

NAS1149D0463J

Purchased

No

210

Each

0.0000

1

1

**\*AN960JD416\***

**\*\***

Washer

CCR264SS3-3

Purchased

No

210

Each

1,285.000

2

2

**\*CCR264SS3-3\***

**\*\***

Cherry Rivet

Location

Loc Qty

Loc Code

FP-B

2

113973

2

ST311

283

117849

283

ST317

1000

119017

1000

MS27039-4-06

Purchased

No

210

Each

433.0000

1

1

**\*MS27039-4-06\***

**\*\***

Screw

Location

Loc Qty

Loc Code

ST292

433

119075

400

119124

33

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_  
Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries



# Picklist Print

October-21-11 11:30:29 AM

Page 5

Work Order ID: 75388

**\*75388\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

D2651-1 Manufactured No

270 Each 1,063.000 6 6

**\*D2651-1\***

**\*\***

Plug

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
fpa	2	
69018	2	
FP-A	1061	
57869	1	
66445	10	
70839	2	
71037	31	
73827	1017	

D2651-3 Manufactured No

270 Each 1,547.000 6 6

**\*D2651-3\***

**\*\***

O-Ring

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
FP-A	1547	
61962	12	
66956	30	
73489	505	
73828	1000	

D3873-1 Manufactured No

280 Each 342.0000 14 14

**\*D3873-1\***

**\*\***

Bushing

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
ST088	342	
64760	1	
68247	4	
73829	19	
73831	318	

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

H:\FORMS\Quality Assurance\approved QA\NCRWO RevE

# Picklist Print

Page 6

October-21-11 11:30:29 AM

Work Order ID: 75388

**\*75388\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

D2646	Manufactured	No	280	Each	91.0000	1	1
-------	--------------	----	-----	------	---------	---	---

**\*D2646\***

Aft Cap

**\*\***

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
FP002	60	
73294	60	
FP004	17	
68280	17	
FP006	5	
62678	5	
FP-4	5	
70945	1	
71070	4	
fp5	4	
71038	4	

D3805-041	Manufactured	No	280	Each	0.0000	1	1
-----------	--------------	----	-----	------	--------	---	---

**\*D3805-041\***

Wearplate Assembly Fwd, Low Gear

MS27039-1-08

Purchased	No	280	Each	1,971.000	2	2
-----------	----	-----	------	-----------	---	---

**\*MS27039-1-08\***

Screw

**\*\*****\*\***

<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>
ST291	1971	
117423	155	
118378	316	
118910	500	
119075	500	
119109	500	

October-21-11 11:30:29 AM

Shop Packet Print

Page 6

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

H:\FORMS\Quality Assurance\approved QA\NCRWO RevE

# Picklist Print

October-21-11 11:30:29 AM

Page 7

Work Order ID: 75388

**\*75388\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

MS21042L3

Purchased

No

280

Each

9,976.000

7

7

**\*MS21042L3\***

**\*\***

Nut

Location

Loc Qty

Loc Code

ST300

976

117441

16

117885

87

118451

179

118927

694

ST516

6000

119017

6000

ST518

3000

119075

3000

D3805-045

Manufactured

No

280

Each

5.0000

1

1

**\*D3805-045\***

**\*\***

Wearplate Assembly Aft, Low Gear

Location

Loc Qty

Loc Code

FP

5

73817

5

AN960JD10L

NAS1149D0332J

Purchased

No

280

Each

0.0000

2

2

**\*AN960JD10L \***

**\*\***

Washer

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

H:\FORMS\Quality Assurance\approved QANCRWO RevE

# Picklist Print

October-21-11 11:30:29 AM

Page 8

Work Order ID: 75388

**\*75388\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

AN3-37A

Purchased

No

280

Each

2,319.000

7

7

**\*AN3-37A\***

**\*\***

Bolt

Location

Loc Qty

Loc Code

ST353

269

111668

169

118628

100

ST354

50

117619

50

ST518

2000

119086

2000

NAS1149D0363J

Purchased

No

280

Each

2,836.000

7

7

**\*NAS1149D0363.J\***

**\*\***

Washer

Location

Loc Qty

Loc Code

ST298

2836

117601

218

118077

135

118612

483

118968

2000

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries



ITEM	Qty -041	Qty -043	Part Number	Description
1	X		D3804-041	SKIDTUBE ASSEMBLY, 206 A/B LOW
2		X	D3804-043	SKIDTUBE ASSEMBLY, 206 A/B HIGH
5	1	1	D2600-1-160	EXTRUSION
6	1	1	D2646	AFT CAP
7	1	1	D2647	CAP
8	19	20	D2649	CROSS BOLT SPACER
9	6	8	D2651-1	PLUG
10	6	8	D2651-3	O-RING
11		1	D2654-3	WEB
12	1		D2654-1	WEB
13	1	1	D2680-041	NUT PLATE
14	2	2	D3286-1	DOUBLER
15	2	2	D3286-3	STUD
21	2	2	AN960JD10L	WASHER
22	1	1	AN960JD416	WASHER
23	2	2	CCR264SS3-3	RIVET
24	2	2	CR3212-4-03	RIVET
25	52	52	CR3212-4-04	RIVET
26	2	2	MS27039-1-08	SCREW
27	1	1	MS27039-4-06	SCREW

#### NOTES

- 1) MATERIAL: N/A
- 2) FINISH: -CHEMICAL CONVERSION COAT PER DART QSI 005 4.1  
-POWDER COAT WHITE (4.3.5.1) PER DART QSI 005 4.3
- 3) BLACK ANTI-SKID PAINT AS INDICATED TO 0.5 ABOVE LOCATION RIDGE PER DART QSI 005 4.4
- 4) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED
- 5) UNITS: INCHES UNLESS OTHERWISE NOTED
- 6) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
- 7) IDENTIFICATION: NONE
- 8) WEIGHT: 12.5 lb
- 9) WELD PER DART QSI 004
- 10) BENDING: DAMAGE TOLERANCE ON FWD BEND:  
THERE SHOULD BE NO VISIBLE WRINKLES IN THE BEND FROM THE GROUND TO A HEIGHT OF 5 INCHES ABOVE THE GROUND. IT IS ACCEPTABLE TO POLISH OUT GOUGES UP TO 0.020 DEEP IN THE BENT PORTION OF THE TUBE. A MAXIMUM REDUCTION IN DIAMETER OF 0.150" IS ACCEPTABLE IN THE BENT PORTION OF THE TUBE.
- 11) BOND WEB INTO OUTER TUBE WITH SIKAFLEX-241/291 ADHESIVE PER DART QSI 015
- 12) INSERT D2651-1 PLUG C/W D2651-3 O-RING IN HOLES MARKED 'P' (BOTH SIDES OF TUBE)

SHOP COPY  
RETURN TO  
ENGINEERING  
UNCONTROLLED COPY  
SUBJECT TO AMENDMENT  
WITHOUT NOTICE  
WORK ORDER  
NO. 75388 H.C.5

11/10/21

**RELEASED**  
UP 09.03.03  
PC E2N09-538

A	NEW ISSUE	MB	08.07.07
REV.	DESCRIPTION	BY	DATE
DESIGN	91		
DRAWN	91		
CHECKED	91		
MFG. APPR.	91		
APPROVED	91		
DE APPR.	91		
DATE	08.07.07		

<b>DART AEROSPACE USA, INC</b> PORT HADLOCK, WA	
DRAWING NO. D3804	REV. A SHEET 1 OF 5
TITLE SKIDTUBE ASSEMBLY, 206A/B	SCALE NTS
COPYRIGHT © 2008 BY DART AEROSPACE USA, INC. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_



Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

H:\FORMS\Quality Assurance\approved QA\NCRWO RevE

75388

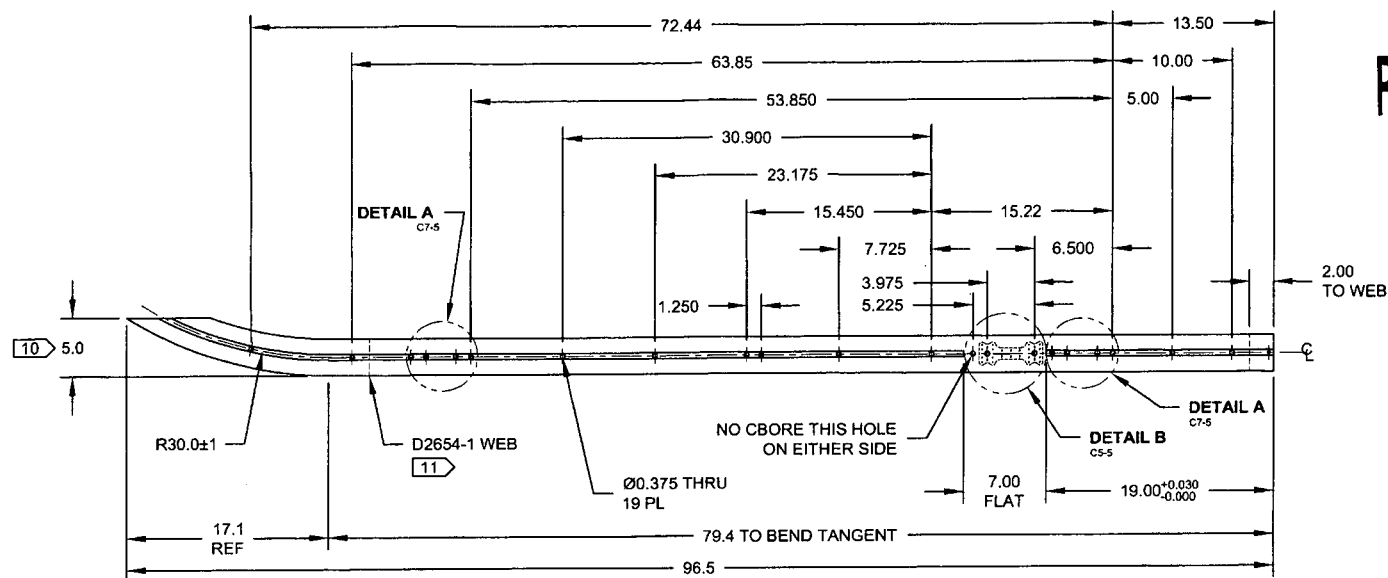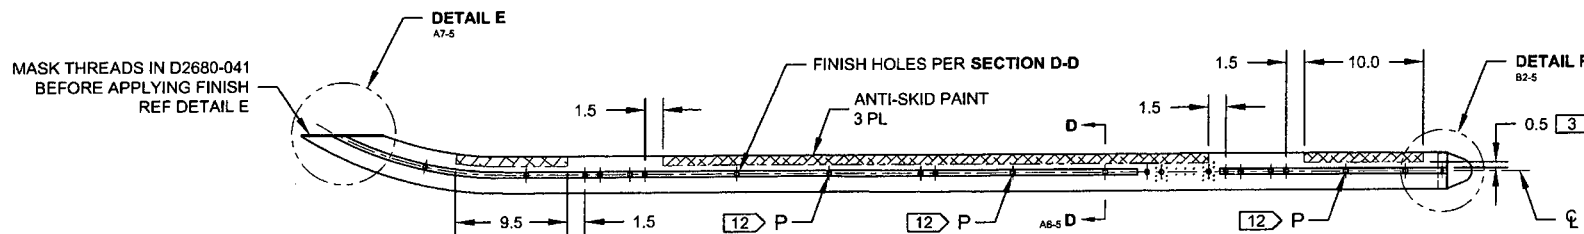RELEASED  
09.29.03**D3804-041 BENDING/DRILLING DETAIL****D3804-041 ASSEMBLY/FINISHING DETAIL**

DESIGN	99	<b>DART AEROSPACE USA, INC</b>	
DRAWN	99	PORT HADLOCK, WA	
CHECKED	99	DRAWING NO.	REV. A
MFG. APPR.	99	D3804	SHEET 2 OF 5
APPROVED	99	TITLE	SCALE
DE APPR.	99	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	<small>COPYRIGHT © 2008 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_


NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries


H:\FORMS\Quality Assurance\approved QA\NCRWO RevE

75388

RELEASED  
(U 09-03-03)

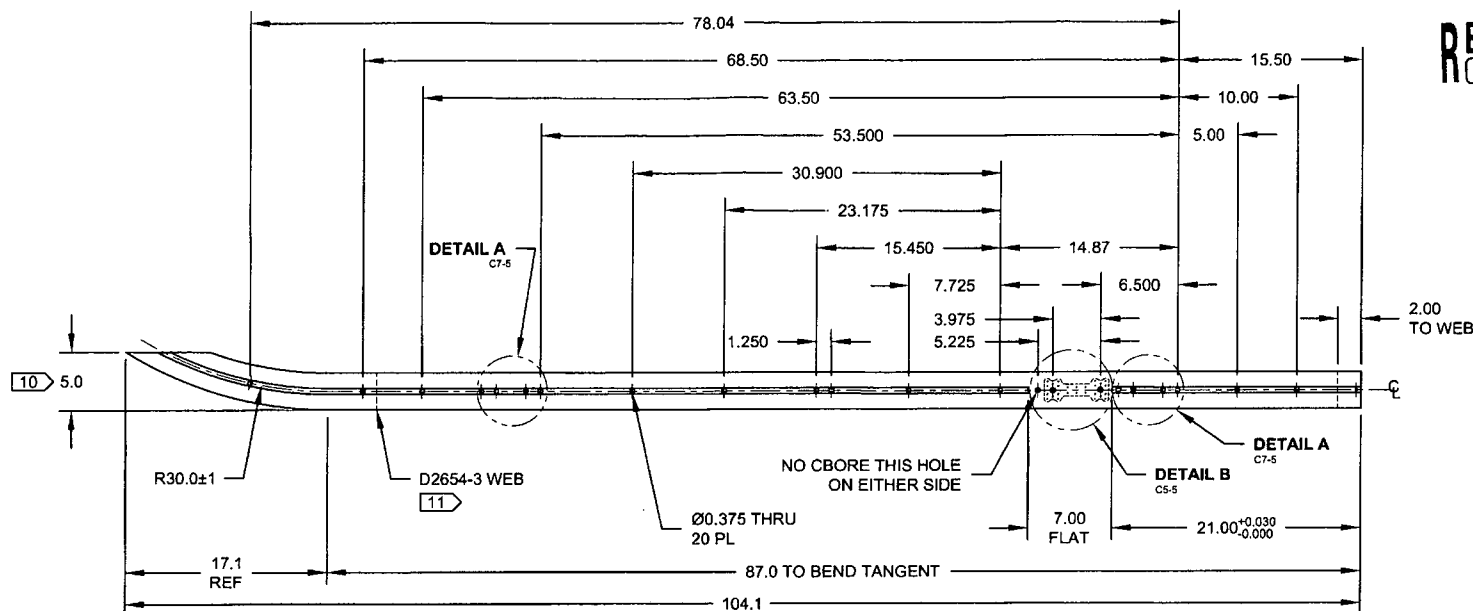

**D3804-043 BENDING/DRILLING DETAIL**

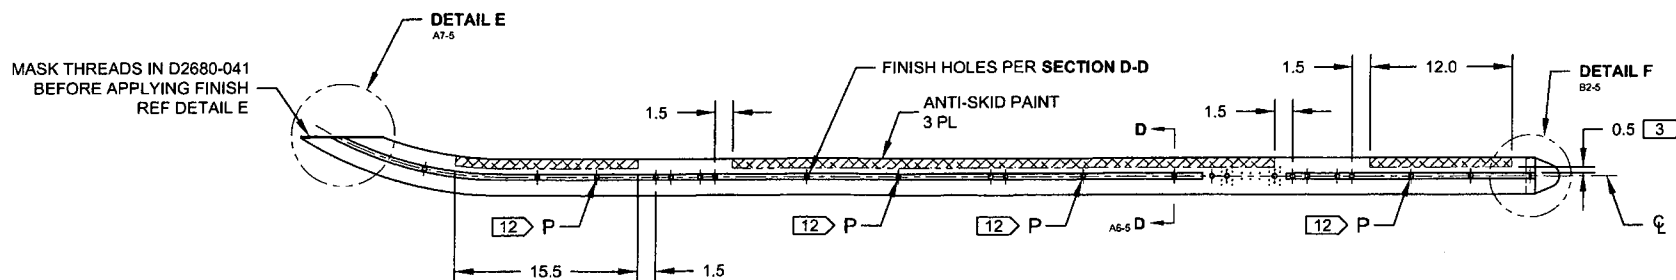

**D3804-043 ASSEMBLY/FINISHING DETAIL**

DESIGN	97	<b>DART AEROSPACE USA, INC</b>	
DRAWN	97	PORT HADLOCK, WA	
CHECKED	97	DRAWING NO.	REV. A
MFG. APPR.	97	D3804	SHEET 3 OF 5
APPROVED	97	TITLE	SCALE
DE APPR.	97	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	COPYRIGHT © 2008 BY DART AEROSPACE USA, INC <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_


Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			


NOTE: Date & initial all entries

H:\FORMS\Quality Assurance\approved QA\NCRWO RevE


75388

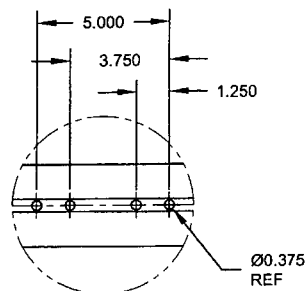RELEASED  
UP 09.03.03

**DETAIL A**  
D6-2  
C2-2  
D6-3  
C2-3  
SCALE NONE

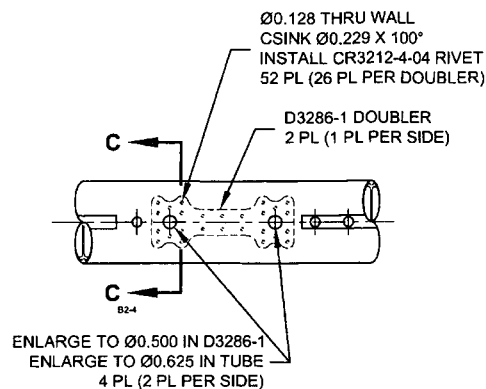


**DETAIL B**  
C3-2  
C3-3  
SCALE NONE

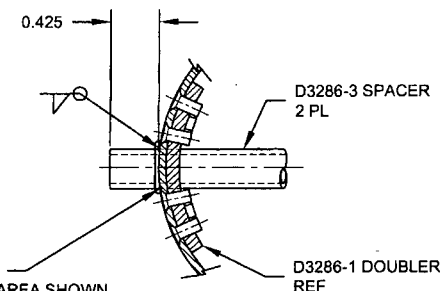

- TO INSTALL D3286-1/3:
1. GRIND OFF FLANGE IN AREA SHOWN, FLUSH WITH OUTSIDE SURFACE OF ROUND TUBE
  2. LOCATE & DRILL D3286-1 DOUBLER USING DT3286-1T1
  3. ENLARGE HOLES IN D3286-1 TO Ø0.500
  4. ENLARGE HOLES IN TUBE TO Ø0.625 AND CHAMFER HOLE 0.03 X 45°
  5. RIVET D3286-1 TO TUBE
  6. INSERT D3286-3 SPACER
  7. WELD IN PLACE AND GRIND FLUSH

**SECTION C-C**  
PARTIAL SECTION  
SCALE NONE

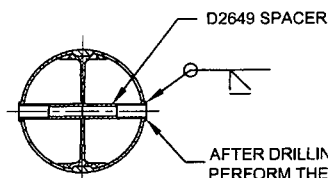

- AFTER DRILLING AND BENDING ASSEMBLY PERFORM THE FOLLOWING FOR Ø0.375 HOLES ONLY:
1. CHAMFER HOLE 0.03 X 45°
  2. INSERT D2649 SPACER
  3. WELD INTO PLACE AND GRIND FLUSH
  4. CBORE TO Ø0.313 X 0.75 DP (EXCEPT WHERE INDICATED)

**SECTION D-D**  
A4-2  
A4-3  
FOR Ø0.375 HOLES ONLY  
SCALE NONE

DESIGN	9	<b>DART AEROSPACE USA, INC</b>	
DRAWN	J	PORT HADLOCK, WA	
CHECKED	9	DRAWING NO.	REV. A
MFG. APPR.	B	D3804	SHEET 4 OF 5
APPROVED	14	TITLE	SCALE
DE APPR.	14	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	<small>COPYRIGHT © 2008 BY DART AEROSPACE USA, INC. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

H:\FORMS\Quality Assurance\approved QA\NCRWO RevE



75380

RELEASED  
97 07.03.07

CCR264SS3-3  
RIVET  
2 PL

CR3212-4-03 RIVET  
2 PL

**VIEW G-G**  
SCALE NONE

A7-5

D2647 CAP. TO INSTALL:  
1. CUT TUBE LEVEL  
2. REMOVE RIDGE ON FWD SIDE  
3. LOCATE D2647 (TRIM AS REQD)  
4. WELD D2647 IN PLACE  
5. GRIND FLUSH  
6. RIVET D2680-041 NUT PLATE  
IN PLACE

MS27039-4-06 SCREW  
AN960JD416 WASHER

D2680-041  
NUTPLATE

1.0 REMOVE RIDGE ON  
INSIDE OF SKIDTUBE  
LEAVE 0.070 MIN.

1/16

**DETAIL E**  
SCALE NONE

B7-2  
B7-3

0.400

END OF WEB

SEAL WITH  
SIKAFLEX-241/291

D2646 AFT CAP

Ø0.204  
REF

MS27039-1-08 SCREW  
AN960JD10L WASHER  
2 PL

BORE OUT END  
OF SKIDTUBE  
TO 0.75 DEPTH  
AND 0.070 WALL

**DETAIL F**  
SCALE NONE

B2-2  
B2-3

DESIGN	97	<b>DART AEROSPACE USA, INC</b>	
DRAWN	97	PORT HADLOCK, WA	
CHECKED	97	DRAWING NO.	REV. A
MFG. APPR.	97	D3804	SHEET 5 OF 5
APPROVED	97	TITLE	SCALE
DE APPR.	97	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	<small>COPYRIGHT © 2008 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSES OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

Dart Aerospace Ltd

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries